

PARTS LIST



C-DIT 400 SPREADER

400 REMOTE




P 0800 853 002
E info@yelo-agri.com
W www.yelo-agri.com

PARTS & SUPPORT

For parts and service support, contact your authorised Yelo store or visit our website for store locations. If you need further assistance, we are only a phone call or email away. Parts list included.



EXPLODED PARTS DIAGRAM – REMOTE SPREADER

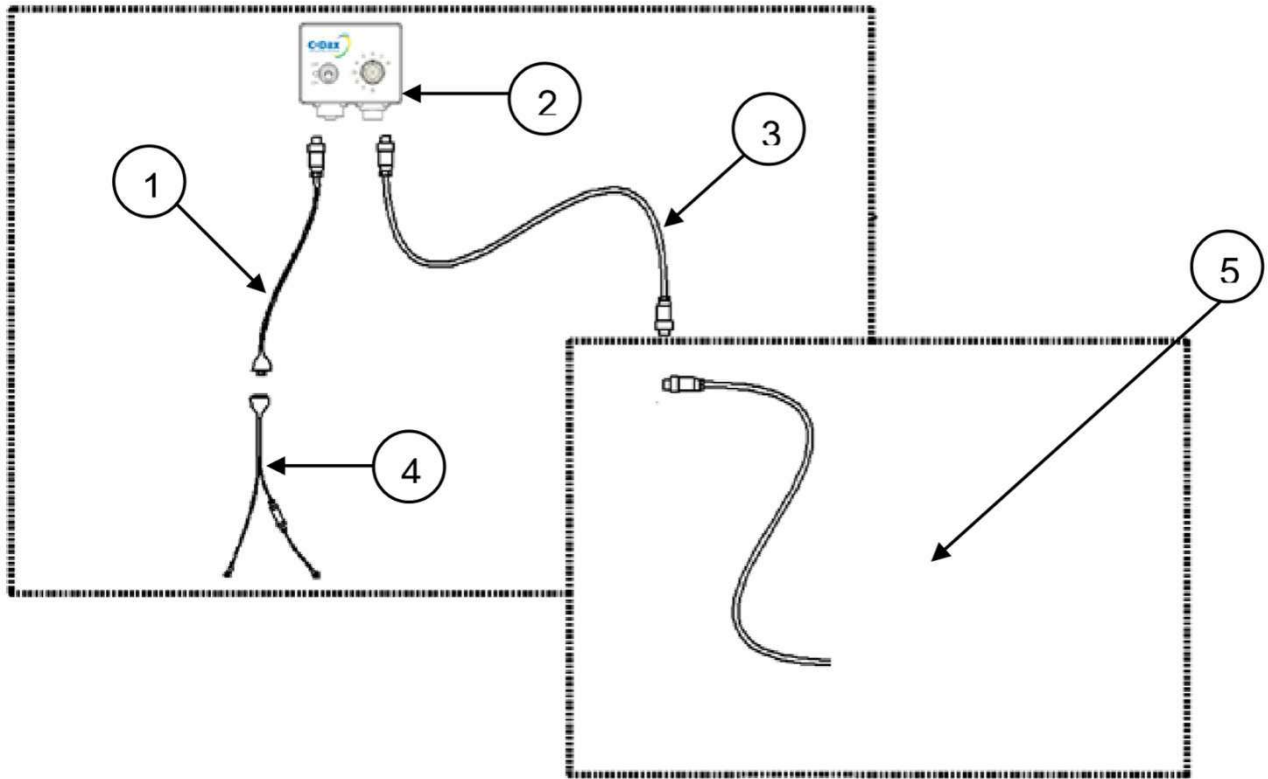

PARTS LIST – REMOTE SPREADER

Item No.	Part No	Description
1	1500-7150	Cable-Electrical-Loom-CDIT Remote Control to Battery Cable
2	2220-0400	C-DIT In-Cab Remote Control
3	1500-7200	Cable-Electrical-Data-Pasturemeter/Spreader Extension-7 Core-4M
4	1500-3700	Cable-Electrical-Loom-Battery Feed-2.2M
5	3004/3014/3017	Spreader (not shown) Connected to Remote Control